


FRAME UPPER DOOR PAIR TJ 97-06

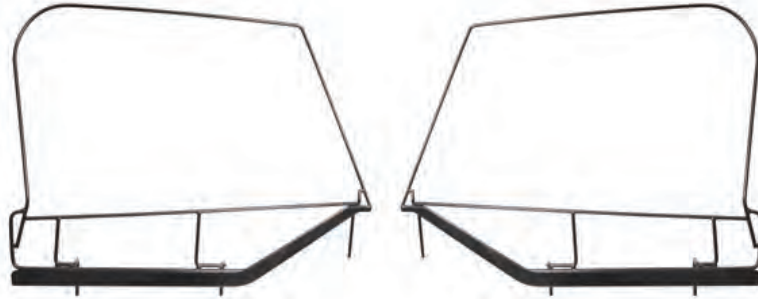

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE YOU BEGIN.

Due to the many variations in body alignments the new upper door frames will need to be fitted to your vehicle before the upper door skin is attached.

Step 1. Install the upper door frame into the lower half door. Close the half door and check around the edges of the door frame for alignment. If adjustments are needed you will have to remove the upper door frame to make the adjustments. Do not make adjustments with the frame in the door.



Step 2. To adjust the door frame properly you will need a flat even surface. To adjust the door frame away from the windshield you will need to stand the frame vertical on the ground with the windshield side on the ground. Stand on the lower portion of the frame and using slight force adjust the frame in the direction illustrated. Adjust the frame in small increments and test fit after each adjustment until the desired fit is achieved.



Step 3. To adjust the door frame towards the windshield you will need to adjust in the opposite direction as illustrated using the same procedures as in step two.



For Technical Assistance Contact:
OMIX-ADA Tech Support
Phone: 1-800-449-6649
Email: techsupport@omix-ada.com
Web: www.Omix-Ada.com

Copyright Omix-Ada 2011