

## 18-24 JEEP WRANGLER JL FRONTIER SERIES LIGHT MOUNT BRACKETS ATTJL01E104-BX



### CAUTION BEFORE INSTALLING

**Before installation** - Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: (626) 369-2121

**ATTICA4X4 is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.**

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

- **Always wear eye protection when operating power tools.** •

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:*

- Name of purchase location
- Date above Bar Code
- Bar Code on side of box
- Date inside box cover

# INSTALLATION **MANUAL**

## TOOLS REQUIRED

- 4MM HEX TOOL
- 5MM HEX TOOL
- 13MM SOCKET



## HARDWARE KIT

 **X 20**  
W17 | WASHER

 **X 4**  
W23 | WASHER

 **X 4**  
W13 | WASHER

 **X 16**  
W19 | WASHER

 **X 8**  
N14 | HEX FLANGE NUT

 **X 4**  
N12 | HEX FLANGE NUT

 **X 4**  
W09 | WASHER


 **X 16**  
W16 | WASHER

 **X 4**  
B23 | HEX HEAD BOLT

 **X 4**  
B13 | SQUARE NECK BOLT

 **X 8**  
B15 | HEX HEAD BOLT

 **X 4**  
B10 | HEX HEAD BOLT

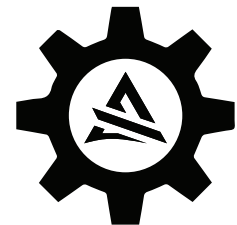

**X 1**  
SPARE PARTS HARDWARE KIT

# INSTALLATION MANUAL

Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the light mount brackets from.



# INSTALLATION MANUAL

First step is to attach the foam padding to the underside of the bracket.



Attach the foam padding as shown to the left.

# INSTALLATION MANUAL



Pre-assemble the two pieces of the brackets using **W16**, **W19** washers, **N14** nuts, and **B15** bolts



Mount the light to the bracket.



# INSTALLATION MANUAL



Wire up the power and ground based on your switch setup. And attach the bracket to the vehicle using **W09**, **W13**, **W14**, **W16**, **W17**, and **W19** washers, **B10** and **B23** bolts.

**W17** plastic washer goes in between the bracket and **W19**/**W13** washers to prevent scratches.



Next step will be to mount the light bracket using **N12** nuts, **B15** bolts and **W09** washers.

Once finished your Attica Frontier Series Light Mount Brackets will be completely installed and ready to take to the outdoors!



IF YOU HAVE ANY QUESTIONS, PLEASE EMAIL US AT [TECH@ATTICA4X4.COM](mailto:TECH@ATTICA4X4.COM) OR CALL US AT  
626-369-2121