



IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

STAINLESS STEEL TAIL LIGHT ARMOR

Time To Install: Approx. 15 Minutes

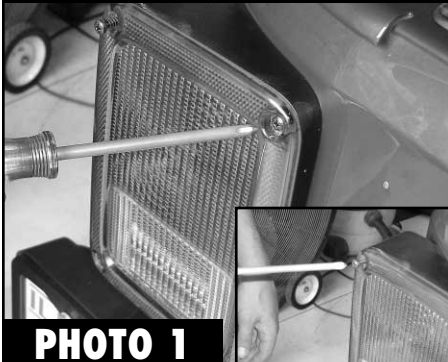

Begin by removing all four screws from the tail light. You will **not** use these screws for installation.

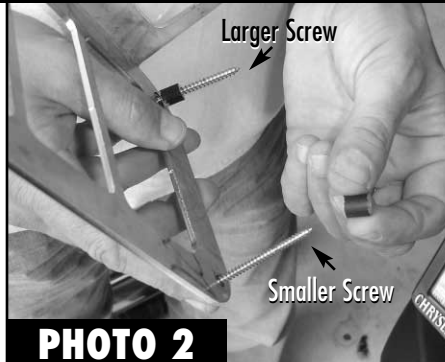


Using the new screws (provided), insert the larger screw (#8) through the outside bottom hole and the smaller screw (#6) through the inside bottom hole. Then place the spacers (provided) on each screw.





Place the Tail Light Armor in position and loosely tighten the two bottom screws.



Now using the new screws (provided), insert the larger screw (#8) through the outside top hole and through the spacer (provided). Insert the smaller screw (#6) through the inside top hole and through the spacer.

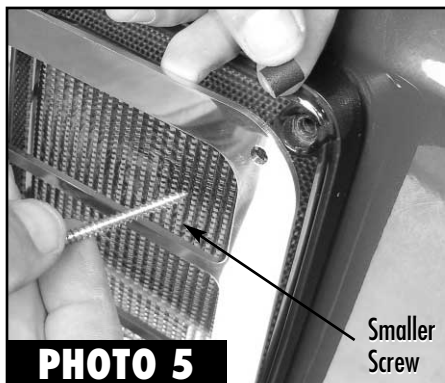

Now securely tighten all four screws. Repeat for the other side and you are finished.

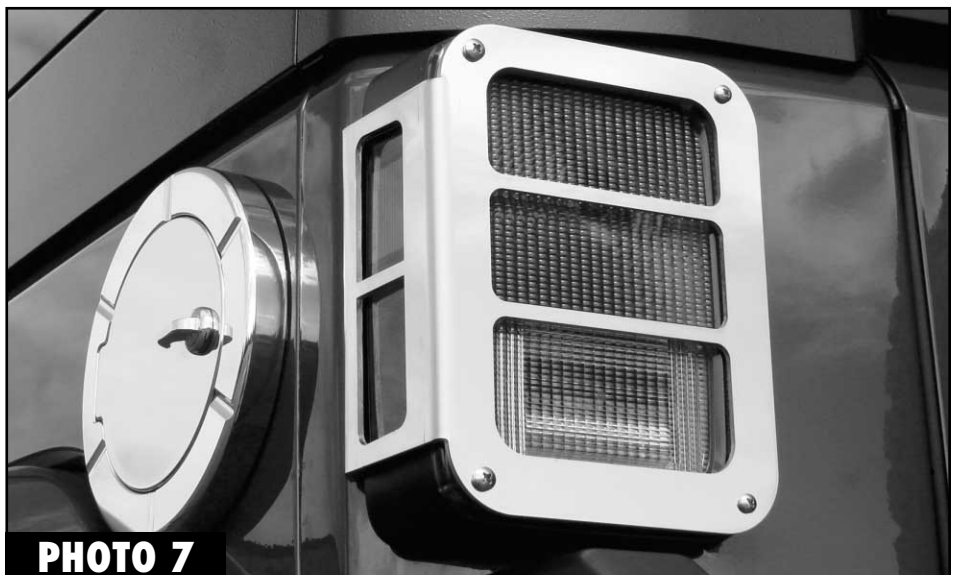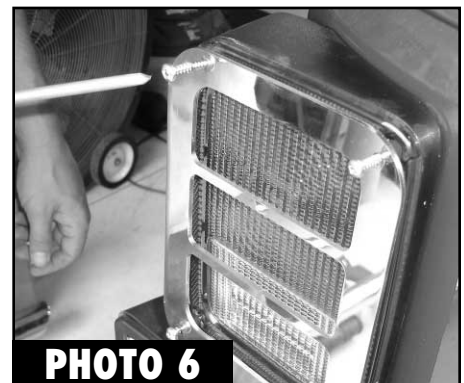

RealWheels Cover Company, Inc. • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180