



RockJock® Professional OffRoad Products presents:

## CE-9033JK '07 & up Jeep JK Wrangler Tow Bar Mounting Kit Installation Instructions

### Fits

'07 & up Jeep JK Wrangler

### Kit Includes

- |  |  |
|--|--|
| 1) CE-9033JKMP.....Tow Bar Mounting Plate  | 2) CE-9033B.....Tow Bar Mounting Fork Brackets |
| 11) EE-3816CH8.....3/8"-24 x 1" long bolts | 2) EE-11-225-Z.....Clevis Pins                 |
| 22) EE-37WSAEH.....3/8" flat washers       | 2) EE-107-20.....Hairpin Clips                 |
| 11) EE-38NS.....3/8"-24 nylock nuts        |  |



### Required Tools

- |                           |                                |
|---------------------------|--------------------------------|
| - Phillips Screwdriver    | - 3/16" drill bit              |
| - C-clamps or Vice-Grips  | - 3/8" drill bit               |
| - 3/8" Transfer Punch     | - 3/8" ratchet w/ 9/16" socket |
| - Hammer                  | - 9/16" wrench                 |
| - Drill - air or electric |                                |



**1)** Remove all plastic attaching screws from stock plastic valance panel, then remove the panel from the vehicle.



**2)** Fit new plate into position. Make sure the ends of the new plate wedge between the ends of the stock plastic bumper cover and the metal of the frame crossmember.



**3)** Initially mount the new plate to the bottom of the bumper by installing 4 of the 3/8"-24 x 1" bolts, washers top and bottom, and nylock nuts in the 4 pre-existing upper holes. Snug these bolts, but do not tighten.



Currie Enterprises / RockJock Professional Off Road Products  
382 N. Smith St., Corona, Ca. 92880  
Ph (714) 528-6957 - F (951) 549-0267  
www.rockjock4x4.com






4) Before proceeding any further, center the new plate side to side on the vehicle using the bumper guards and the tow bar mounts on the plate as reference. Tighten the 4 top bolts.




5) Next, with C-clamps or Vise-Grips, clamp the back of the plate up snugly to the bottom of the crossmember.

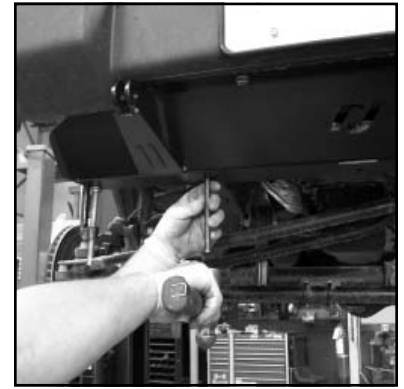


6) Using the plate as a template, and a 3/8" transfer punch, punch the 2 undrilled upper holes and all of the bottom holes.



7) Now go back and drill the holes. Drill pilot holes first with a 3/16" bit, and then follow that up with a 3/8" bit.

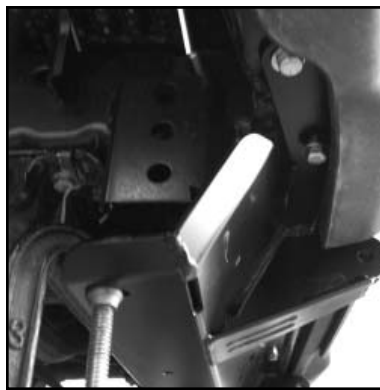

8) Install the remaining 2 top bolts, using the 3/8"-24 x 1" bolts, a washer top and bottom, and the nylock nuts. Go ahead and tighten these bolts down.

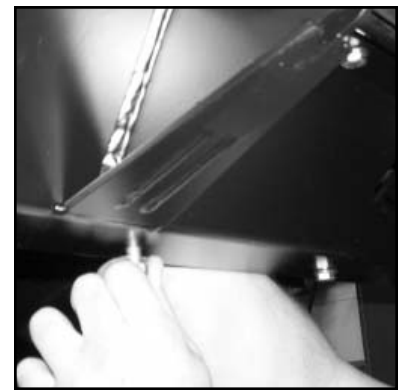

9) Start several of the bottom bolts into their holes with washers and nuts, and then remove the C-clamp or Vise-Grips that you had the plate clamped to the crossmember with.



10) After all of the lower bolts are in their holes, go back and tighten all of the bolts with a 9/16" wrench on top and socket on the bottom.



11) Attach tow bar ends by inserting them into the bracket on the plate and affixing them in place with the clevis pins and hairpins. Tow bar ends must then be bolted to the tow bar of your choice.




12) For optimum performance your tow vehicle's hitch should allow for the tow bar to ride as level as possible. Always use safety chains (included with the CE-9033F tow bar). This system will work with universal adjustable tow bars from Friedl, Draw-Tite, Valley, or Blue Ox.



Currie Enterprises / RockJock Professional Off Road Products  
382 N. Smith St., Corona, Ca. 92880  
Ph (714) 528-6957 - F (951) 549-0267  
[www.rockjock4x4.com](http://www.rockjock4x4.com)



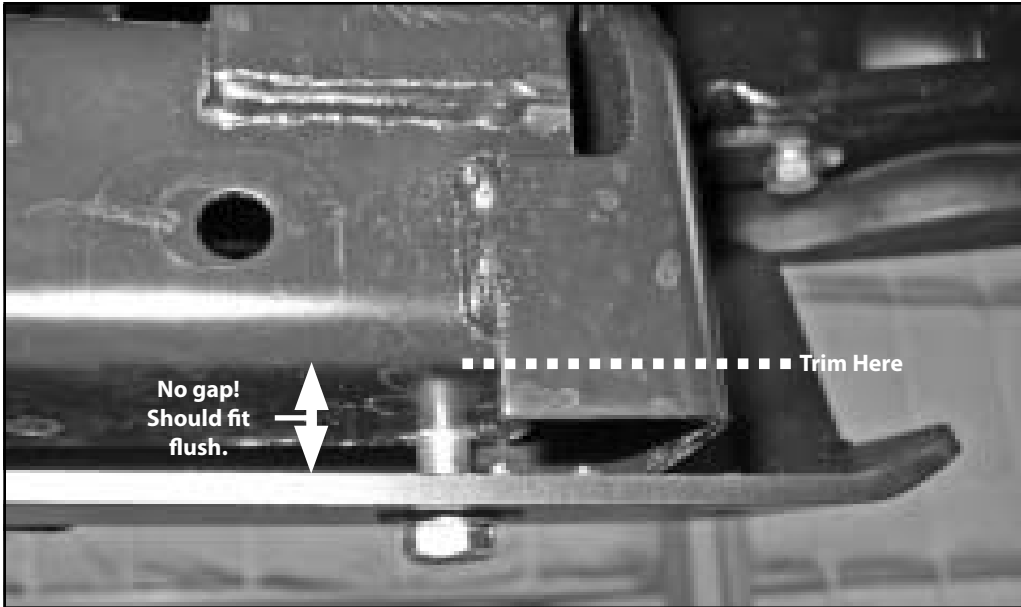

**Update!** We have found on 2010 and up models that the front crossmember has changed! As you can see in the photo, the vertical frame beam now overhangs the bottom of the crossmember that the tow bar plate mounts to. We have found that the easiest way to fix this is cut the bottom of the vertical beam off flush with the crossmember allowing the plate to fit flush against the crossmember.

Also, the furthest 2 outboard holes in the plate - of the 5 that are intended to bolt to the crossmember - are not used on the 2010 and up because the crossmember has been shortened so there is nowhere for them to bolt to. Just discard these 2 bolts.



Currie Enterprises / RockJock Professional Off Road Products

382 N. Smith St., Corona, Ca. 92880

Ph (714) 528-6957 - F (951) 549-0267

[www.rockjock4x4.com](http://www.rockjock4x4.com)

