



BUTTON STYLE FLOORMAT INSTALLATION

Some applications may have 1 or more button(s) to fasten to the OEM factory installed floormat safety positioning post(s). Be sure to fasten all buttons before operating the vehicle.


See the corresponding images for the proper fastening of your factory floorpan fit mats.



Remove old mats to expose you vehicle's safety positioning post(s)



Line up the button(s) of your FLEXTREAD™ mat with the post(s)

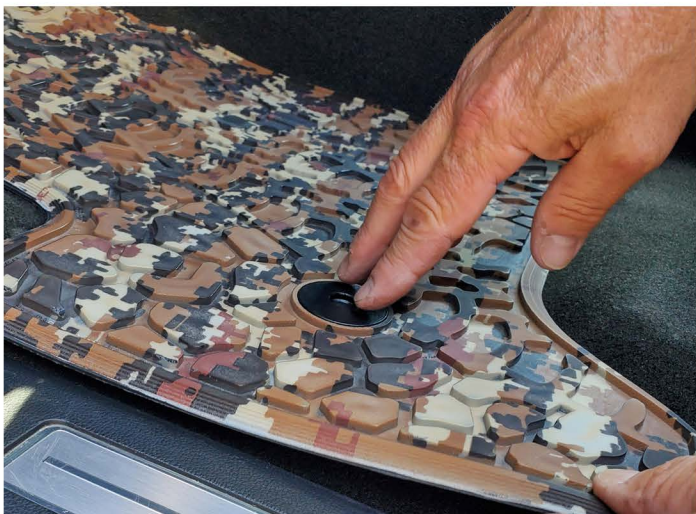

Be sure that each button is fully fastened to the post



The fully installed mat