


7929 Lincoln Ave. Riverside, CA 92504  
Phone: 951.689.ICON Fax: 951.689.1016

PART #	DESCRIPTION
22050D	07-UP JEEP JK FENDER LINER MESH TRIM KIT

COMPONENTS INCLUDED	
(2) 124050-01 JK FENDER LINER MESH TRIM (FRONT)	(2) 124051-01 JK FENDER LINER MESH TRIM (REAR)
HARDWARE INCLUDED	
(22) ALUMINUM RIVET 5/32"	
TOOLS REQUIRED	
MASKING TAPE MARKER	DRILL 3/16" DRILL BIT RIVET TOOL
TECH NOTES	
1. INSTALLATION CAN BE DONE ON OR OFF VEHICLE. IF INSTALLING ON VEHICLE, BE SURE TO PROTECT ANY AND ALL ITEMS THAT COULD BE DAMAGED BY DRILL ONCE IT PASSES THROUGH THE LINER. ICON RECOMMENDS REMOVING FENDERS FROM VEHICLE.	

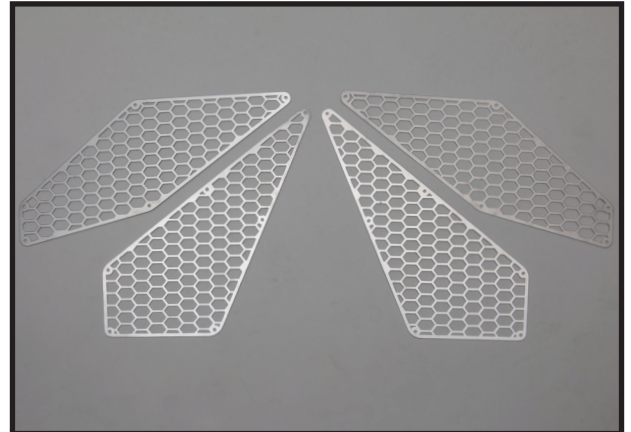


WARNING!
** READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION! IF THESE INSTRUCTIONS ARE NOT PROPERLY FOLLOWED SEVERE FRAME, SUSPENSION AND TIRE DAMAGE MAY RESULT TO THE VEHICLE!
** ICON VEHICLE DYNAMICS RECOMMENDS THAT YOU EXERCISE EXTREME CAUTION WHEN WORKING UNDER A VEHICLE THAT IS SUPPORTED WITH JACK STANDS.
** ICON VEHICLE DYNAMICS RECOMMENDS ALL INSTALLATION TO BE PERFORMED BY A PROFESSIONAL SHOP/SERVICE TECHNICIAN. PRODUCT FAILURE CAUSED BY IMPROPER INSTALLATION WILL NOT BE COVERED UNDER ICON'S WARRANTY POLICY.

## INSTALLATION

NOTE: Installation can be done on or off vehicle. If installing on vehicle, be sure to protect any and all items that could be damaged by drill once it passes through the liner. ICON recommends removing fenders from vehicle.

1. Use blue masking tape (or non marking tape) to locate the panel on the fender liner as shown. It should be equidistant and parallel to all edges. [FIGURE 1]

FIG.1

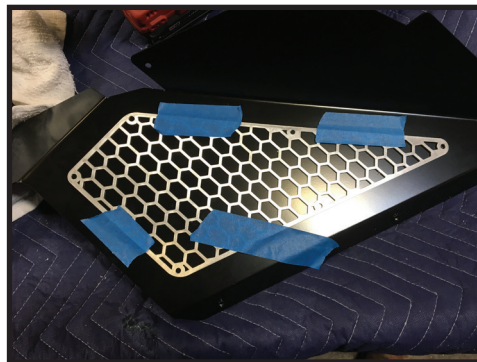

2. Mark holes.
3. Drill using a 3/16" drill bit, which will allow for some misalignment if the holes were not drilled perfectly on center.
4. Rivet panel to fender liner using a rivet tool.
5. Repeat steps for remaining 3 panels.
6. Reinstall fender liners on the vehicle (if applicable).

## ICON VEHICLE DYNAMICS LIMITED LIFETIME WARRANTY

ICON Vehicle Dynamics warrants to the original retail purchaser who owns the vehicle on which the product was originally installed. ICON Vehicle Dynamics does not warrant the product for finish, alterations, modifications and/or installation contrary to ICON Vehicle Dynamics instructions. ICON Vehicle Dynamics products are not designed, nor are they intended to be installed on vehicles used in race applications, for racing purposes or for similar activities. (A "race" is defined as any contest between two or more vehicles, or a contest of one or more vehicles against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America and Canada.

ICON Vehicle Dynamics' obligation under this warranty is limited to the repair or replacement, at ICON Vehicle Dynamics' discretion, of the defective product. Any and all costs of removal, installation or re-installation, freight charges and incidental or consequential damages are expressly excluded from this warranty. Items that are subject to wear are not considered defective when worn and are not covered.

ICON Vehicle Dynamics components must be installed as a complete kit as shown in our current application guide. Any substitutions or exemptions of required components will immediately void the warranty. Some finish damage may happen to parts during shipping and is not covered under warranty.

This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been improperly installed, modified or customized subject to accident, negligence, abuse or misuse.



**ICON VEHICLE DYNAMICS®**  
PERFORMANCE SUSPENSION SYSTEMS AND SHOCK ABSORBERS

7929 Lincoln Ave. Riverside, CA 92504 Phone: 951.689.ICON Fax: 951.689.1016  
[www.iconvehicledynamics.com](http://www.iconvehicledynamics.com)



**FOLLOW US ON FACEBOOK!**

