



**1-800-779-2102**

Mon – Thurs: 8:00am - 5:00pm | Friday: 8:00am - 4:00pm CST

**INSPECT YOUR PRODUCT FOR DAMAGE & MISSING  
PARTS BEFORE PROCEEDING TO INSTALLATION**

**PROCEDURE FOR RETURNS OR MISSING HARDWARE**

-PLEASE CONTACT THE ORIGINAL POINT OF PURCHASE FOR:  
SHIPPING DAMAGE, RETURNS, OR WARRANTY CLAIMS

-CONTACT DEE ZEE DIRECTLY FOR MISSING PARTS OR HARDWARE

**WWW.DEEZEE.COM**

REGISTER YOUR PRODUCT ONLINE: [www.deezee.com/registration](http://www.deezee.com/registration)  
VIEW INSTRUCTIONS ONLINE: [www.deezee.com/instructions](http://www.deezee.com/instructions)

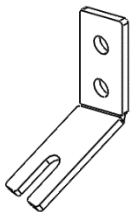
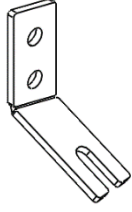

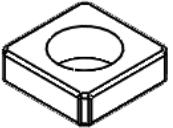

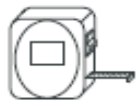
---

**⚠ WARNING:** Cancer and Reproductive Harm  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

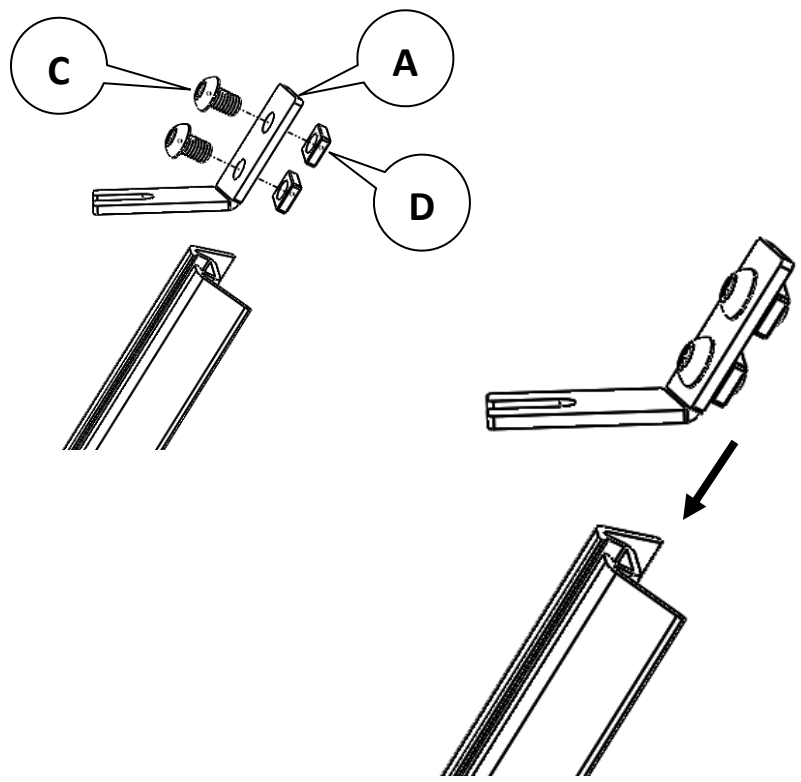
Operating, servicing, and maintaining a passenger vehicle can expose you to chemicals such as lead, phthalates, engine exhaust, and carbon monoxide that are known to the State of California cause cancer and birth defects or other reproductive harm. To minimize exposure, service your vehicle and its accessories in a well-vented area and wear gloves or wash your hands frequently.

# JL A-Pillar Accessory Bracket Installation Instructions

## DZ 4451JL Jeep Wrangler JL 2019-Current

<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <b>A</b> Accessory Mount Bracket         </div>  <p style="text-align: center;">B 2603LP <span style="float: right;">X1</span></p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <b>B</b> Accessory Mount Bracket         </div>  <p style="text-align: center;">B 2603RP <span style="float: right;">X1</span></p>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <b>C</b> M8 X 12mm Button Head Bolt         </div>  <p style="text-align: center;">PN 1260 <span style="float: right;">X4</span></p>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <b>D</b> M8 Square Nut         </div>  <p style="text-align: center;">PN 1262 <span style="float: right;">X4</span></p>	<p style="text-align: center; margin: 0;"> <b>TO INSTALL THIS BRACKET KIT            YOU MUST HAVE BRACKET KIT            DZ 4445JL AND DZ 4446JL            PREVIOUSLY INSTALLED ON THE            JEEP.</b> </p>	<p><b>Required tools</b></p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p style="text-align: center;">Allen Wrench 5mm <span style="float: right;">Tape Measure</span></p>

**6** Install bolt (C) through the bracket (A) and put a nut (D) on the back side and slide the bracket in the channel and locate the desired position. Fully tighten bracket.



**Brackets A and B are not intended for a Light Bar.**